

Table of Contents

Table of Contents	1
Before You Begin	3
Infant Insert	3
Leg Loops	3
Baby Carrier Features	4
Wearing the Baby Carrier	6
Securing Your Baby - Inward Facing	8
Securing Your Baby - Outward Facing	10
Removing your Baby out of the Carrier	12
Accessories included	13
Bib	13
Care and Warranty	14
Product Care	14
Notes regarding disposal	15
Please observe the disposal regulations in your country.	15
Warranty Card / Transfer Check	16

Used symbols and their meanings

in this manual you will find the following symbols:



Symbol for a potential hazard.



Symbol for a note.



Symbol for a Tip.



DANGER

KEEP FOR FUTURE REFERENCE

DEATH or SERIOUS INJURY can occur:



- Carefully read and follow all instructions before using the baby carrier.
- Your balance may be adversely affected by your movement and that of your child.
- Be careful when bending forward or leaning.
- This carrier is not suitable for use in sporting activities.
- Continually check the baby carrier while in use to ensure that the baby is secure.
- Only use this baby carrier for children weighing between 3.5 and 14.5 kg.
- Small children can fall through the leg openings. Adjust the leg openings to the smallest possible size for your child.
- This baby carrier is not designed to secure your child in the car. **DO NOT** use this baby carrier instead of a child safety seat.
- For babies weighing between 3.5 and 5 kg the leg loops must be used. See next page for leg loop instructions.
- Never release the child until the baby carrier is completely attached and secured.
- Ensure child is properly positioned with legs straddling the pouch and both arms extended through the armholes.
- Ensure all connectors and buckles are securely fastened while in use.
- Pull all straps snugly around your body.
- Ensure sufficient room around child's face to provide a clear source of air.
- **DO NOT** carry the baby carrier on your back.
- **DO NOT** over tighten the baby carrier. Over tightening can restrict baby's breathing.
- Babies should be placed inward facing until they have head and neck control.
- Inspect the baby carrier regularly for any wear and tear. Check to ensure all buckles, straps, snaps and adjustments are working before each use.
- **DO NOT** lie down with a child in the baby carrier.

Infant Insert

BRITAX RÖMER recommends use of the infant insert for baby's weighing between 3.5-6 kg so that your child does not sit too low in the baby carrier. Sitting too low in the baby carrier may restrict baby's breathing, especially with infants less than 6 kg.

- 1 Connect both zippers by lining up the zipper pulls and sliding the zippers closed.
- 2 Snap the zipper covers down on each side.
- 3 Hook the two loops on the insert over the leg loop buttons on the front of the carrier.

Discontinue use once baby weighs over 6 kg or when baby's ears reach the top of the baby carrier.

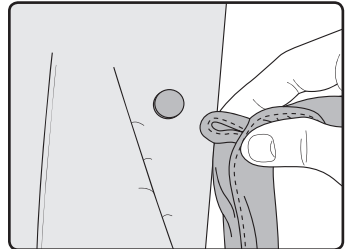
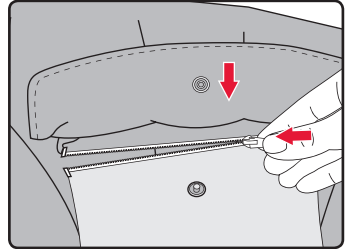


GB


Leg Loops

Leg loops MUST be used for children weighing between 3.5-5 kg.

- 1 Choose either position 1 or 2 to achieve the best fit for your child.
- 2 Slide the leg loops on both sides of the baby carrier over the leg loop buttons at the desired position.

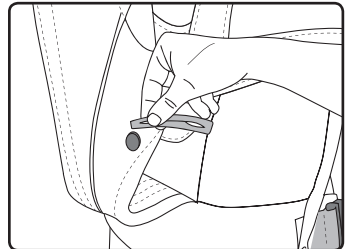
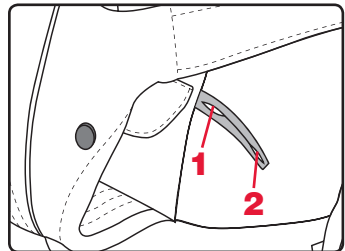


Baby Carrier Features

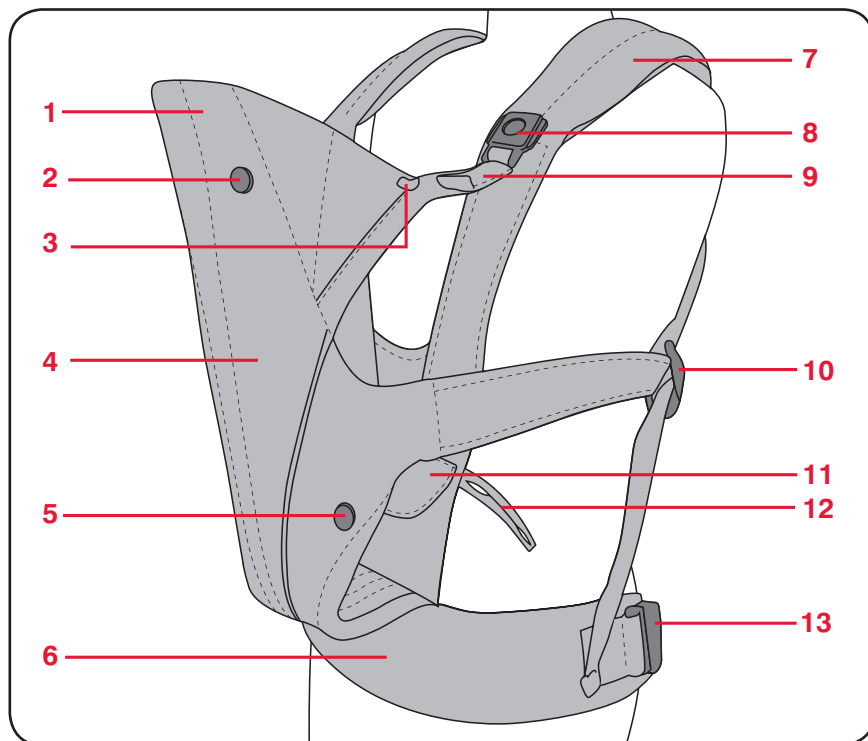

- | | |
|--|---|
| 1 Head Support | 10 Harness Adjuster |
| 2 Head Support Button | 11 Insert Zipper and Cover (inside pouch) |
| 3 Head Support Loop | 12 Leg Loop |
| 4 Pouch | 13 Belt Adjuster |
| 5 Insert and Leg Loop Button | 14 Back Harness Strap |
| 6 Belt | 15 Belt Adjuster Strap |
| 7 Shoulder Harness | 16 Excess Webbing Holder |
| 8 Upper Connector and Upper Connector Post | 17 Harness Adjuster Strap |
| 9 Upper Connector Adjuster Strap | 18 Belt Buckle |
| | 19 Infant Insert |



Baby Carrier Features

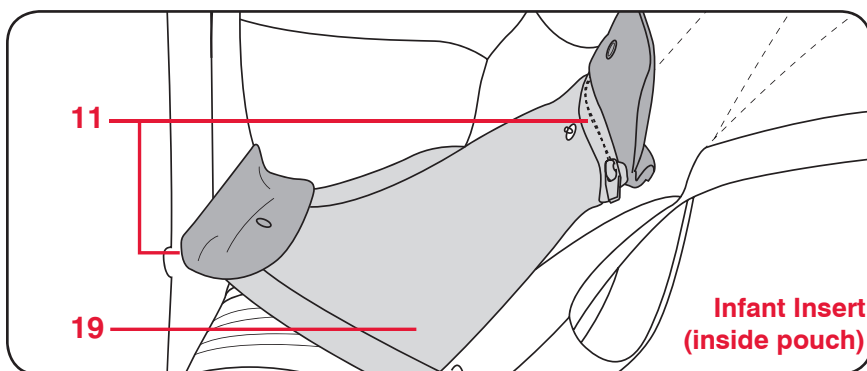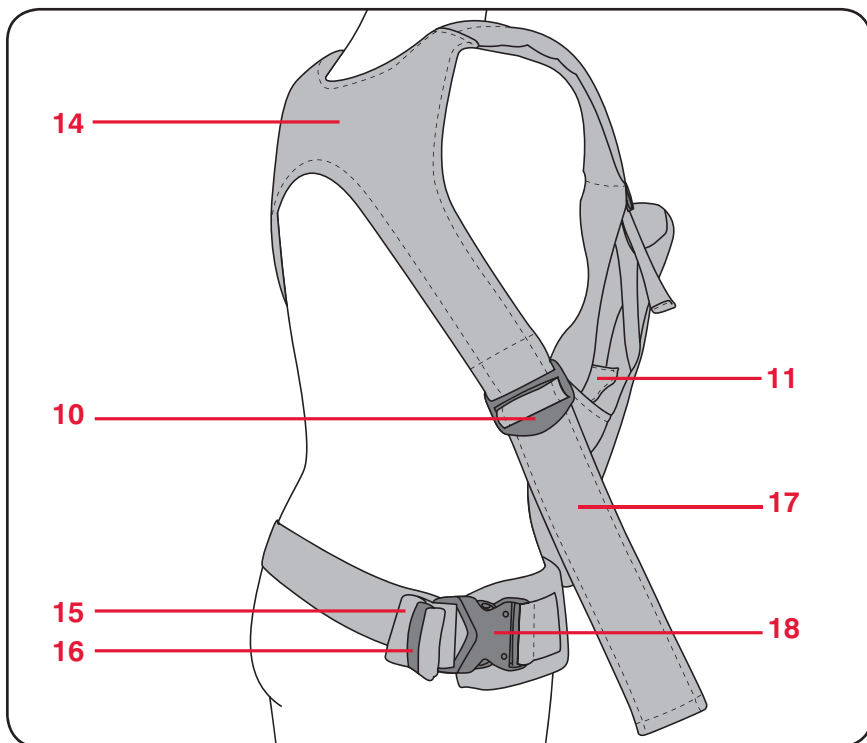

Wearing the Baby Carrier



i Loosen all of the harness straps to make the baby carrier easier to put on.

- 1 Place the shoulder harness over your head. Position the upper connector posts in the front of your body.

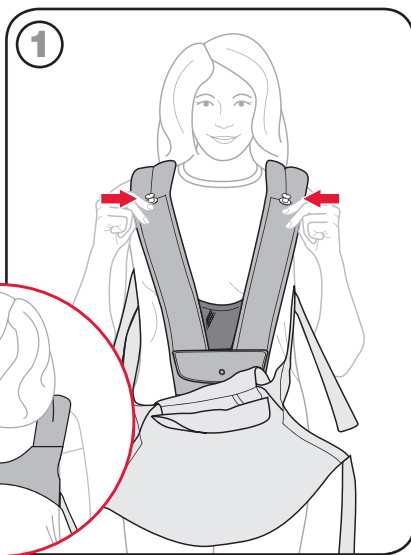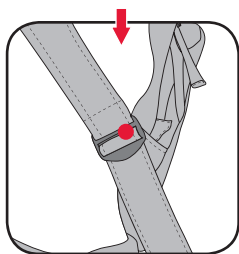


i Lift tabs on shoulder harness adjuster to loosen straps.

- 2 Attach the belt by wrapping it around your waist and lining up the buckle. Press the buckle together until it locks into place.

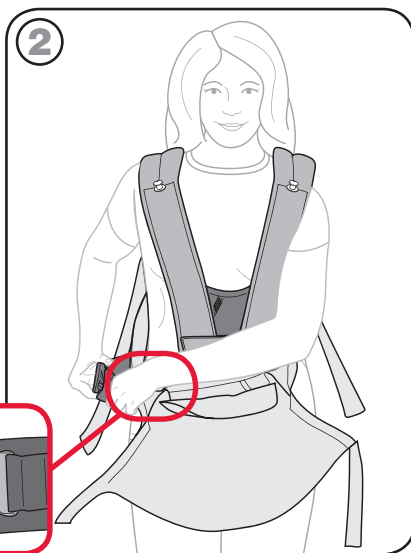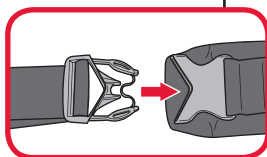


Wearing the Baby Carrier

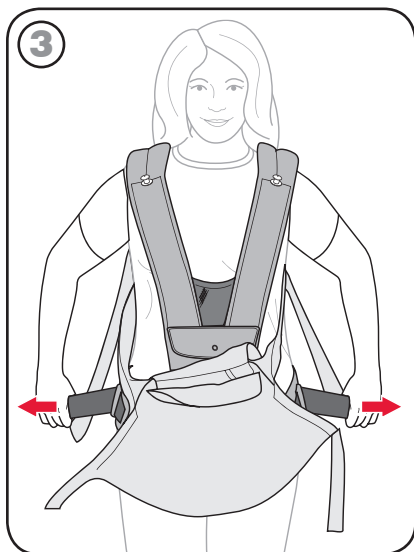


3 Tighten the belt snugly.

Use the excess webbing holder to contain extra webbing.

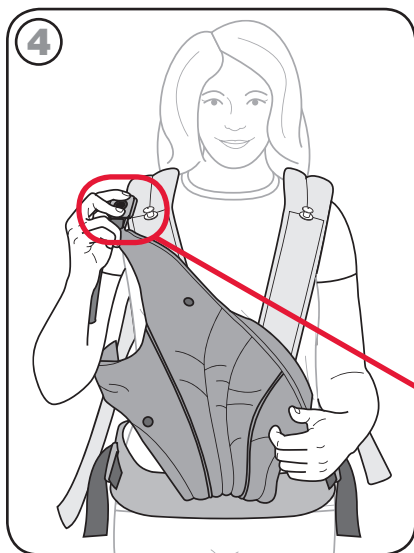

4 Ensure that the upper connector straps are not twisted and connect one upper connector.

*For inward facing, see page 8.
For outward facing, see page 10.*

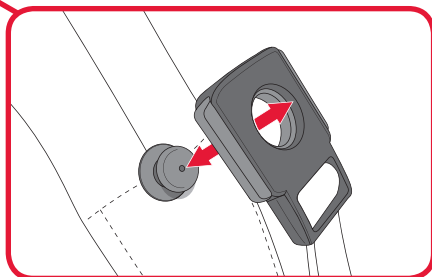

Securing Your Baby - Inward Facing




Children without head or neck control should always be placed inward facing.

- 1 Place the baby into the pouch so that the legs are straddling the bottom of the pouch.


! Ensure that the baby's arms and legs are not caught inside the baby carrier. Always support your baby with one hand when placing baby in or removing baby from carrier pouch.

i Infant insert may be required to achieve a correct fit with small children. See page 3.

- 2 Ensure that the connector straps are not twisted and attach the second connector.

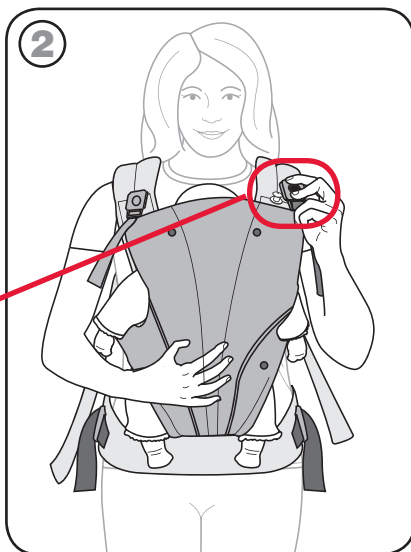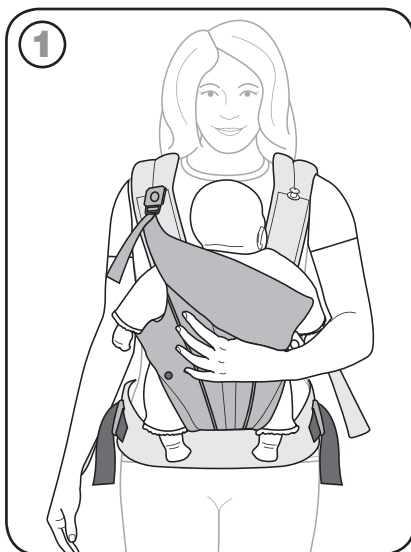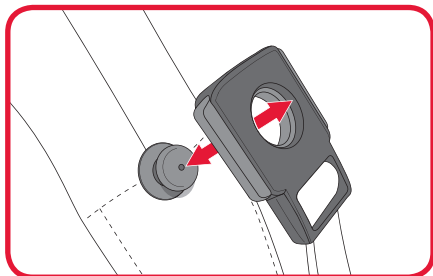



Securing Your Baby - Inward Facing

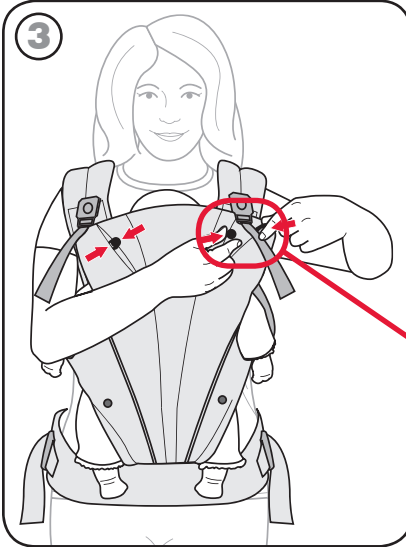

- 3 Button the head loops to support the baby's head by securing the loop over the button at the top of the carrier.

! The head loop connectors are only necessary if the baby does not have head or neck control.

⚠ For infants 3.5 - 5 kg, the leg loops must be used. See page 3.

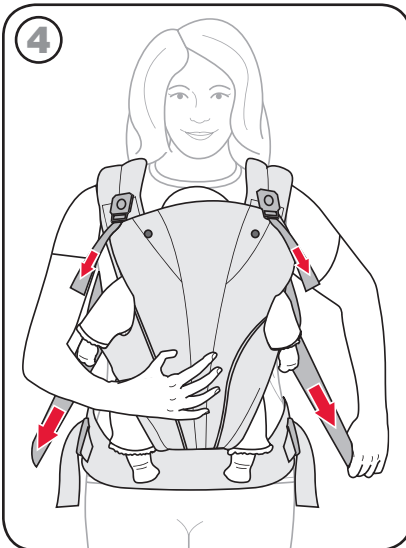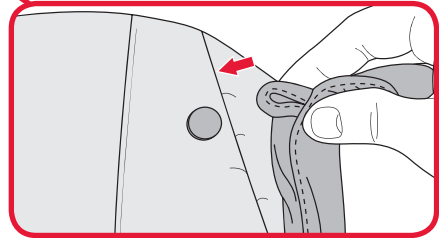

- 4 Tighten all of the baby carrier straps until the baby carrier is snug around you.

! Attach the leg loops at this point if needed. See page 3.

⚠ Ensure that the baby's arms are under the upper connector adjuster straps to provide the optimal security for your baby.


! Adjust baby carrier until optimal fit and comfort are achieved. Do not overtighten the baby carrier. Over tightening can restrict baby's breathing which can lead to suffocation.

Securing Your Baby - Outward Facing



Children without head or neck control should always be placed inward facing.

- 1 Place baby into the pouch so that the legs are straddling the bottom of the pouch.


! *Ensure that the baby's arms and legs are not caught inside the baby carrier. Always support your baby with one hand when placing baby in or removing baby from carrier pouch.*

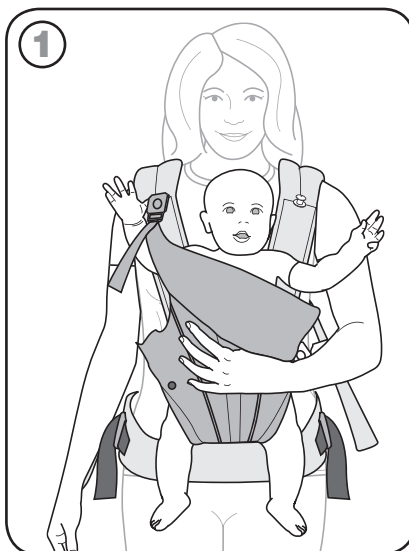

- 2 Fold the head support down and attach the second connector strap. Ensure that the straps are not twisted.

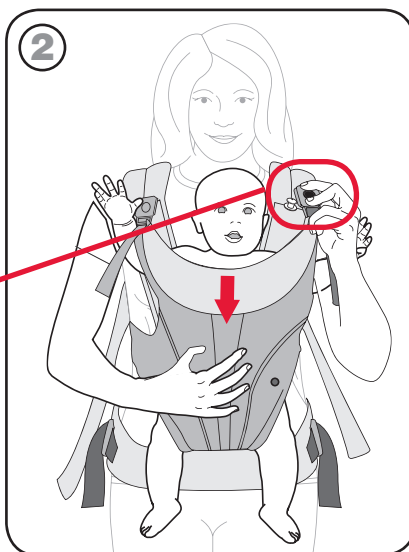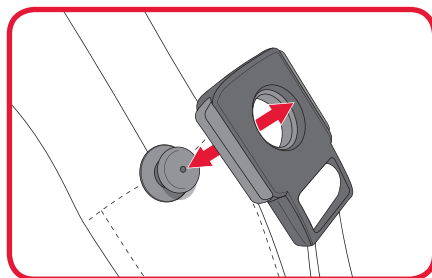

Securing Your Baby - Outward Facing

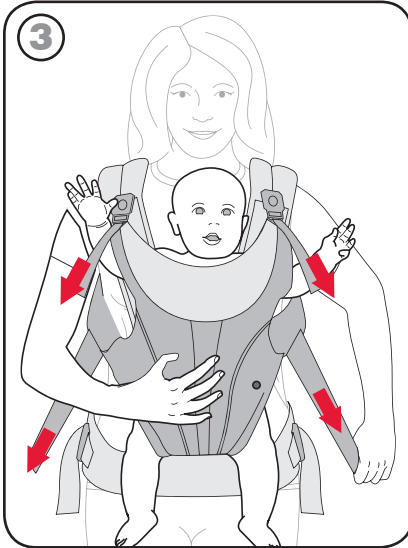

- 3 Tighten all of the baby carrier straps until the baby carrier is snug around your body.

! Ensure that the baby's arms are under the upper connector adjuster straps to provide the optimal security for your baby.

! Adjust baby carrier until optimal fit and comfort are achieved. Do not overtighten the baby carrier. Over tightening can restrict baby's breathing which can lead to suffocation.




i Visit Britax.eu for more tips and FAQs.

GB

Removing your Baby out of the Carrier



⚠ Always support baby with one hand when placing baby in or removing from baby from carrier pouch.

- 1 First disengage the upper connectors.
- 2 Loosen first harness strap with your free hand.
- 3 Loosen the other harness strap and lift your baby from the baby carrier pouch.

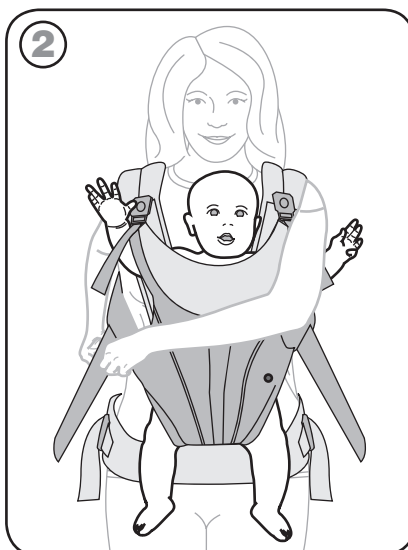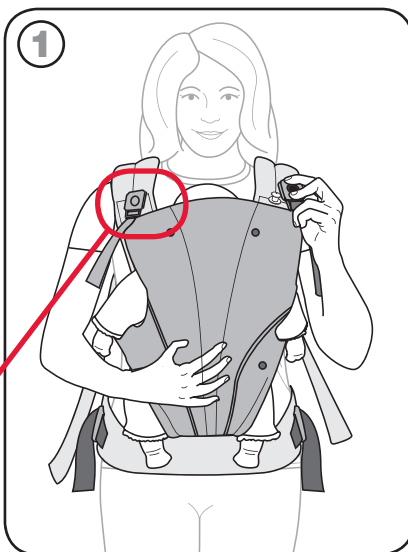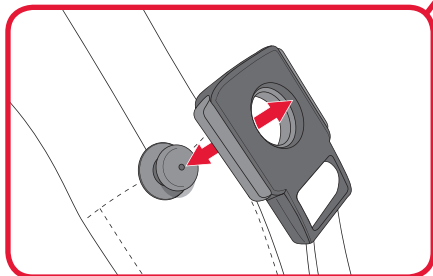

Bib

- 1 With the long part of the bib lying inside the baby carrier, pull both upper connectors through the slots in the bib.
- 2 Lift the insert cover inside the pouch and snap the bottom of the bib to it to secure.

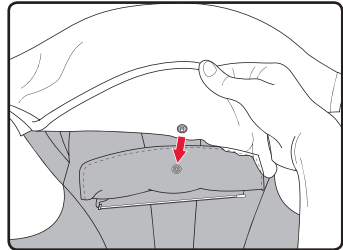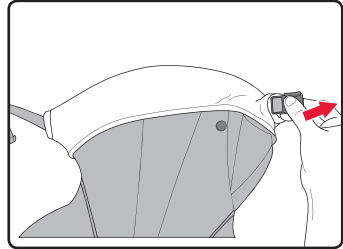

Visit Britax.eu for more Accessories available.

Care and Warranty

Product Care

Fabric

- Wipe fabric with a damp cloth to spot clean.
- For heavier cleaning:
Machine wash separately
Delicate cycle
Gentle detergent
Lay flat to dry
DO NOT bleach
DO NOT iron
NO fabric softener

Improper care or cleaning can void warranties.

Plastic Parts

- Periodically check that the upper connectors are working properly and are free of debris.
- Rinse with cold water to remove debris.

Snap and Zippers

- If zippers or snaps become soiled, wipe with a damp cloth to remove debris.

Britax Excelsior Limited and BRITAX RÖMER Kindersicherheit GmbH warrants this product to the original retail purchaser as follows:

Limited Two-Year Warranty

This product is warranted against defective materials or workmanship for two years from the date of original purchase. Proof of purchase is required. Your exclusive remedy for this warranty is that BRITAX RÖMER will, at its option, provide repair or replacement components to the original purchaser for this product or replace the product. BRITAX RÖMER reserves the right to discontinue or change fabrics, parts, models or products, or to make substitutions. Labor and shipping costs for returns are not included.

To make a claim under this Warranty, you must contact BRITAX Customer Service. Proof of purchase is required.

Warranty Limitations

This warranty does not include damages which arise from negligence, misuse, salt corrosion, or use not in accordance with the user guide. **Improper care or cleaning voids all warranties, both expressed and implied.**

The use of non-BRITAX RÖMER Inc. accessories is not approved by BRITAX RÖMER. The use of unapproved accessories could cause this product to become damaged or dangerous. Their use automatically voids the BRITAX RÖMER warranty.

Limitations of Damages

The warranty and remedies as set forth above are exclusive and in line of all others, oral or written, express or implied. In no event will Britax or the retailer selling this product be liable for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Notes regarding disposal

Please observe the disposal regulations in your country.

Disposal of packaging		Container for cardboard
Disposal of components	Cover	Residual waste, thermal recycling
	Plastic parts	In accordance with the identification on the part into the containers provided
	Metal parts	Container for metals
	Webbing	Container for Polyester

GB

Warranty Card

Name: _____

Address: _____

Post Code: _____

City/Town: _____

Telephone No.
(including area code): _____

e-mail address: _____

Product: _____

Article No.: _____

Fabric colour:
(design): _____

Accessories: _____

Date of purchase: _____

Buyer (signature): _____

Retailer: _____

Transfer Check

1. Completeness	<input type="radio"/> examined / OK	<input type="radio"/> I have checked the product and am sure that the product was complete on delivery and that all functions are sound.
2. Function test		
- Harness adjustment	<input type="radio"/> examined / OK	<input type="radio"/> I received adequate information on the product and its functions prior to purchase and have noted the care and maintenance instructions
3. Intactness		
- Product	<input type="radio"/> examined / OK	
- Fabrics	<input type="radio"/> examined / OK	
- Plastic Parts	<input type="radio"/> examined / OK	
Date of purchase:	_____	
Buyer (signature):	_____	
Retailer:	_____	

Retailer's stamp